




Display replacement Manual

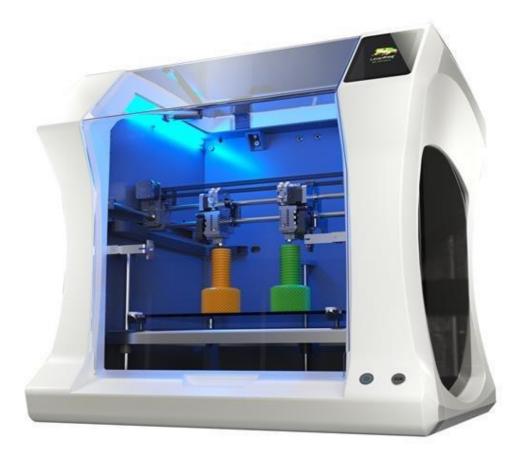



1. First loosen the front right part of the housing. You need to loosen two screws on the interior of the housing marked in the picture below:



2. The outer side of the housing is held in place using Velcro strips. Gently peal the housing away to expose the connections of the display, the HDMI cable and the power cable. They can be found at the top left corner of the screen.

After disconnecting the cables, you are able to push the display assembly out of the housing.

- 3. Gently run a thin blade knife around the bezel of the display in order to detach the assembly and to be able to remove the assembly from the housing. The bezel has a double sided tape holding the display in place so it should be fairly easy to remove.
- 4. Once you are done, clean the surface of the housing with some rubbing alcohol. Then insert the new assembly. Connect the two cables and secure the housing back into place.